
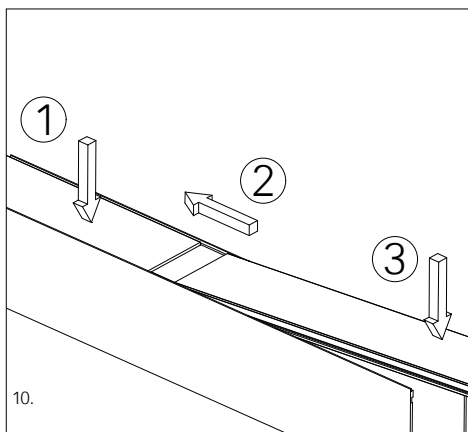
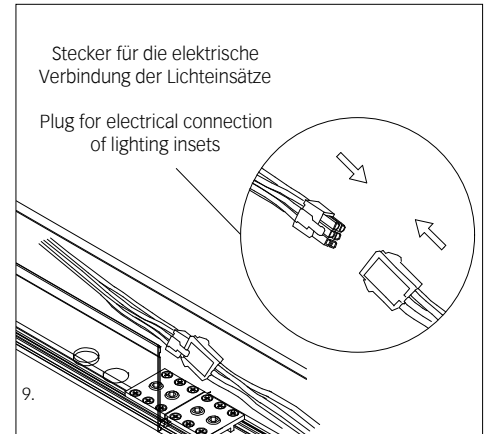
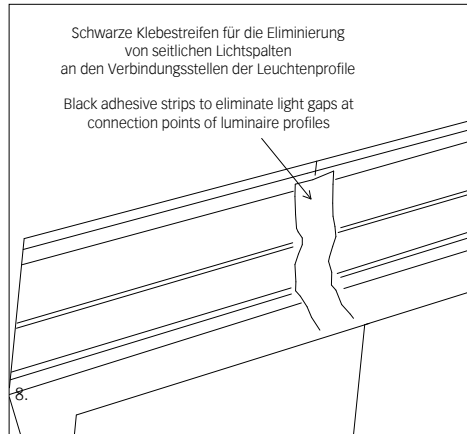
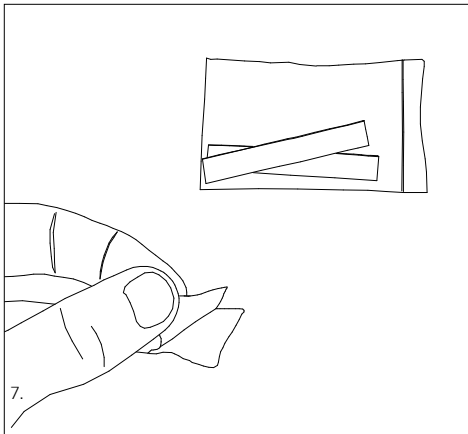
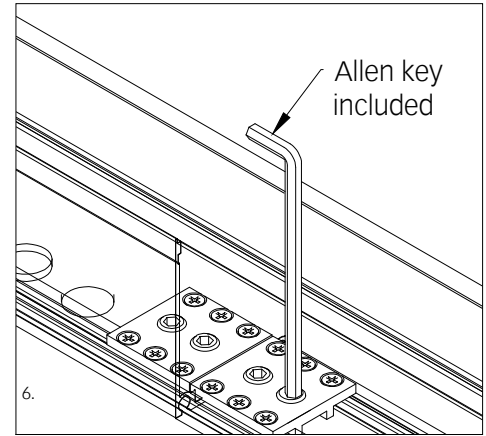
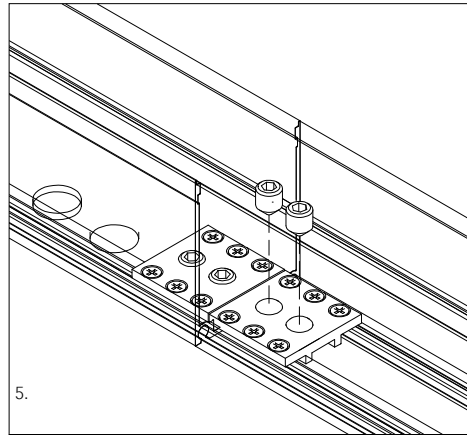
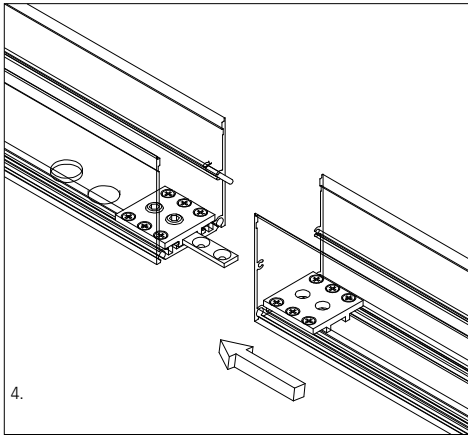
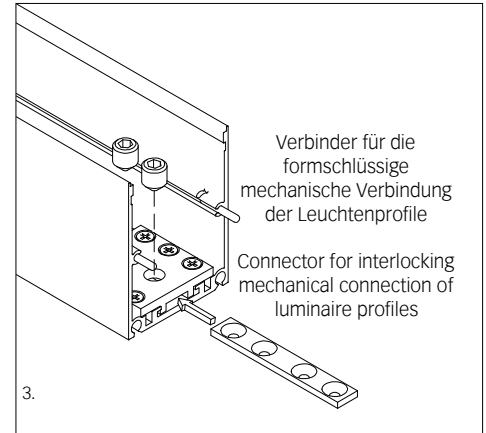
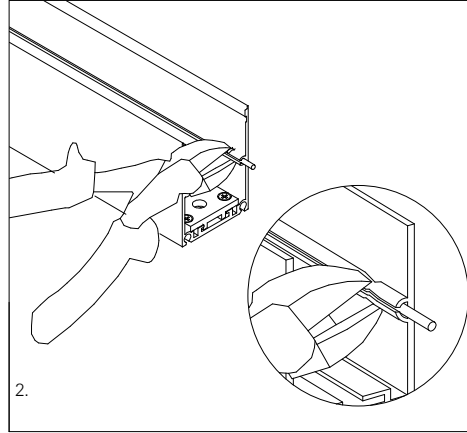


MATRIC CONNECTORS | A3/D3/G3/R3/G9/R9

1. MONTAGE UND INSTALLATION | MOUNTING AND INSTALLATION:

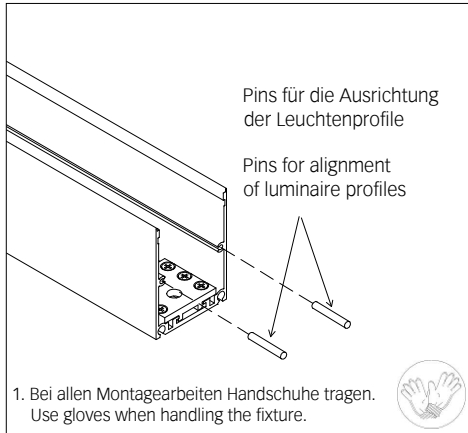

IMPORTANT:

SUSPENDED:

- all sections must be suspended individually and perfectly levelled (horizontally and vertically) before connecting them together - this is crucial
- all suspension cords must be positioned perfectly vertical
- all suspension cords must be tensioned with the same strength
- if these conditions are not satisfied then the different parts will settle to different levels and work against one another.

SURFACE:

- all sections must be perfectly in line and if surface isn't even make sure the elements are horizontally mounted
- if these conditions are not satisfied gaps will be the result