



CUBIC M7 | AMBIENT RECESSED FRAME

Q379 - Q479

1. MONTAGE UND INSTALLATION | MOUNTING AND INSTALLATION:

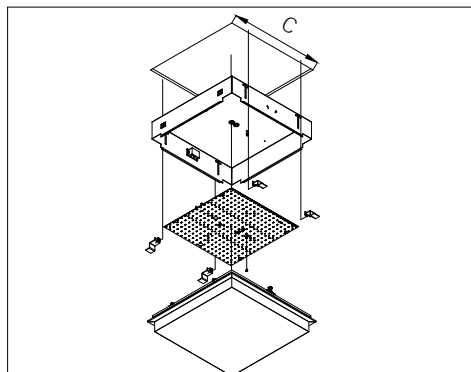


1. Bei allen Montagearbeiten Handschuhe tragen.
Use gloves when handling the fixture.

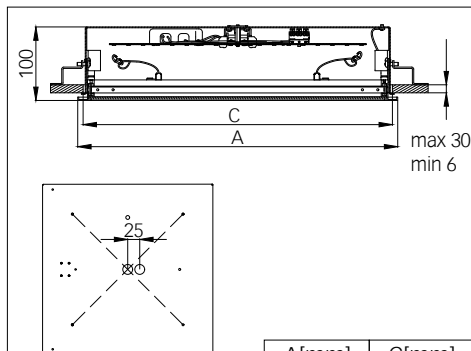


2. Montageöffnungen.
Installation openings.


A[mm]	C[mm]
379	360
479	460

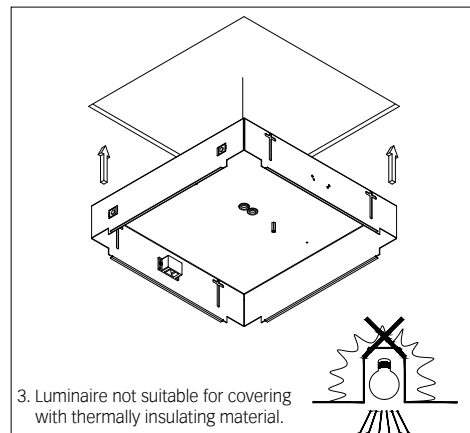


3. Luminaire not suitable for covering
with thermally insulating material.

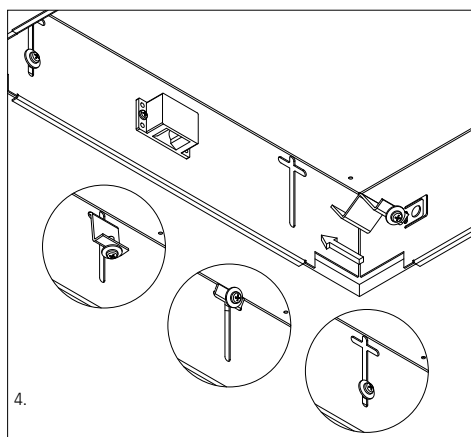


4.

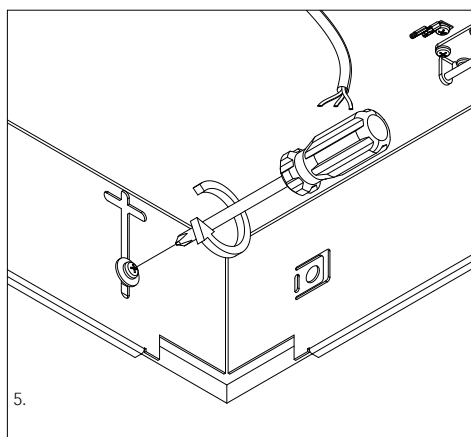


5.

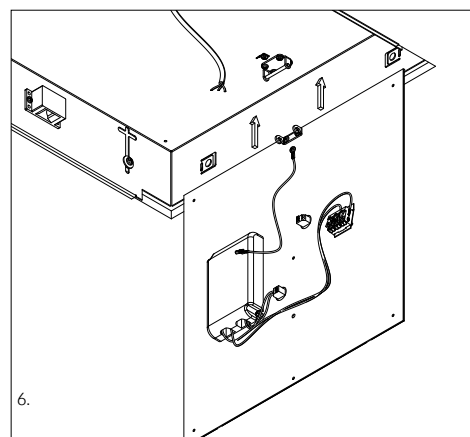


6.

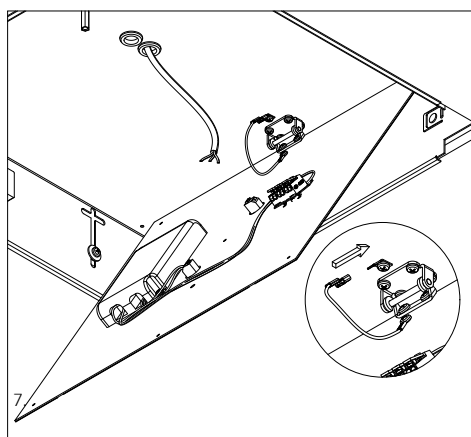


7.

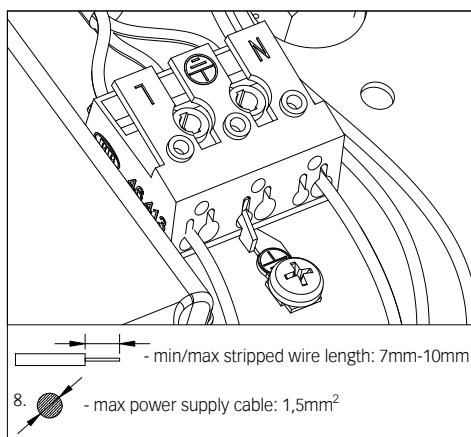


8. - max power supply cable: 1,5mm²

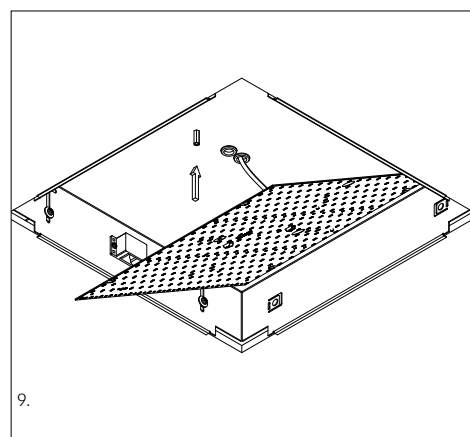


9.

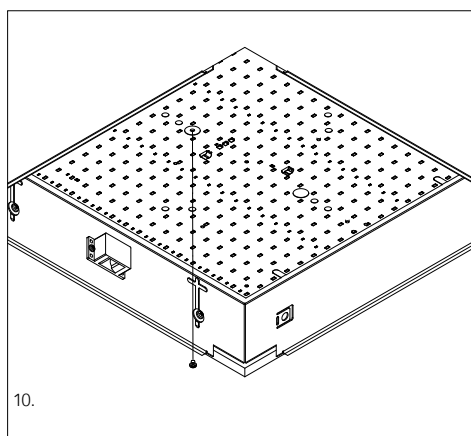

10.

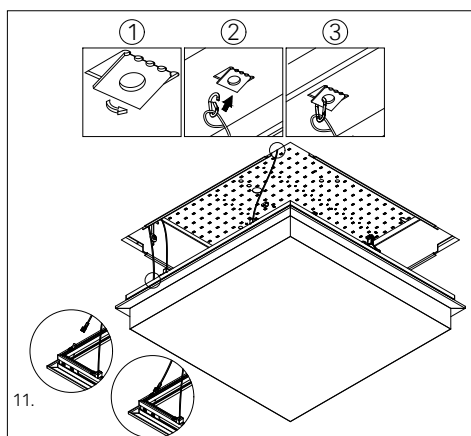

11.

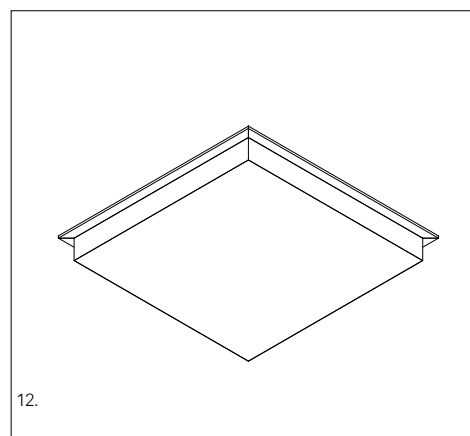

12.

CUBIC M7 | AMBIENT RECESSED FRAME

Q621

1. MONTAGE UND INSTALLATION | MOUNTING AND INSTALLATION:

